

Câblage ES9028Q2M pour Boitier Raspdac

| 9028K2M | Ecran Winstar | Module de contrôle Alimentation |
|-----------------|---------------|------------------------------------|
| PIN 6 | 1 | |
| PIN 2 | 2 | |
| PIN 26 | 4 | |
| PIN 34 | 5 | |
| PIN 24 | 6 | |
| PIN 22 | 11 | |
| PIN 18 | 12 | |
| PIN 16 | 13 | |
| PIN 13 | 14 | |
| | | |
| GPIO22 (PIN 15) | | Boot OK |
| GPIO17 (PIN 11) | | ShutDown |
| GPIO7 (PIN 7) | | Soft ShutDown |

